

Washing machine instructions at the Brühlbleichestrasse 11



Temperature



Final spin

Deutsch	English
Programme	Program
Baumwolle	cotton
Baumwolle Eco	cotton organic
Pflegeleicht	easy wash
Feinwäsche	sensitive wash
Wolle/Seide	wool/silk
Baumwolle 20	Cotton at 20 degrees
Daunen	down clothing
Maschinenreinigung	machine self-cleaning
Pumpen/Schleudern	pump/spin
Ein/Aus	on/off

Put washing detergent into the drawer of the washing machine.

Insert your chip card (hanging up on the wall in your room) into the slot hanging on the wall above the machine, choose your program. Take out the chip card and place it back on the hook in your room.



Dryer Instructions at the Brühlbleichestrasse 11



Deutsch	English
Programme	Program
Mischgewebe	mixed cottons
Wolle	wool
Seide	silk
Leichtbügeln	lightly ironed dry
Bettwäsche	bedlinen
Active wear	active wear
Daunen	down clothing
Sport Wäsche	sport clothing

Put the clothes into the machine.

Insert your chip card (hanging up on the wall in your room) into the slot hanging on the wall above the machine, choose your program. Take out the chip card and place it back on the hook in your room.

